

tēmi

THE PERSONAL ROBOT

Platform Setup Guide REVISION-1



03 / 12 / 2024 | ENG



- Any information regarding features and performances in this document is evaluated or approximate.
- Features and performances may change from time to time.
- Features and performances are mostly related to SW version. The Guide will be updated accordingly.
- In case of mismatch between this document and a new version release-note, the release note is determinative.
- Performances may differ between devices.
- Performances are very much affected by the environment, use cases and conditions.


Revision	Description	Date	Changed by
01	First release	12/03/2024	Sid Jiang

After remove the top cover of our box, you will find the following products, please verify the items below:

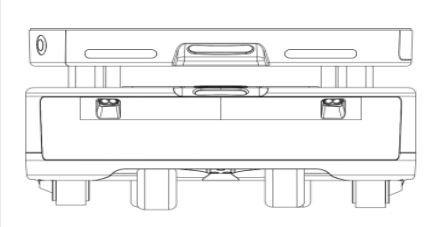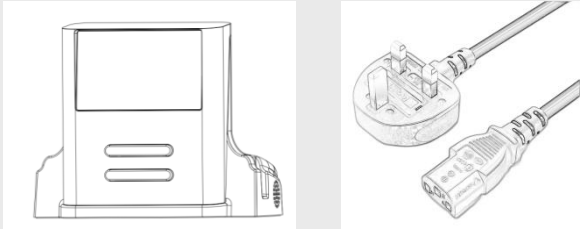Item	Quantity	Picture
Platform with Battery (or battery coming with separate shipments depending on your order)	1	
Homebase (the charging station)& Power cord	1	
An Allen Key& an extra power cable	1	

Platform Main Body

Homebase & Power Cable

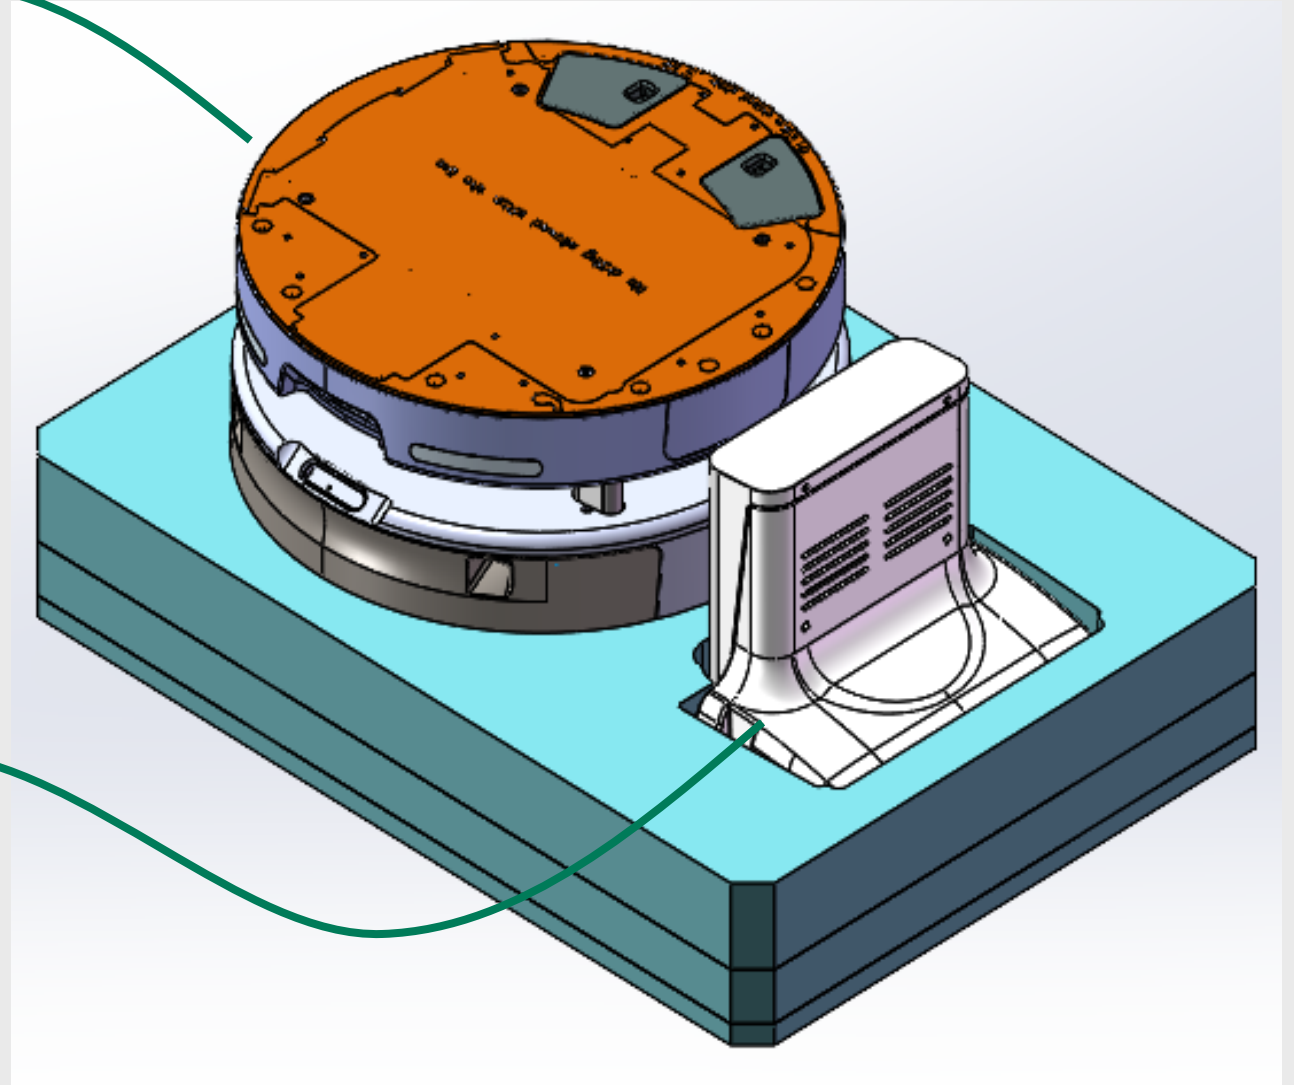

INSTALL THE BATTERY

1. Lift the Battery over once remove two mounting screws from bottom.
2. Press the battery holder to take battery out.
3. Contact support if you need an extra line charger.

Press this in order to remove the battery



Line Charger port



Using the Allen Key in the box to release two screws here



TABLET SETUP

1. Recommended tablet: Samsung Galaxy Tab A8 10.
2. Install Temi Launcher (Please contact our support to get the latest APK).
3. Grant all permissions for temi launcher in Android native settings (this is automatically done in new launcher version).

Note: You could use “adb install -g” command when you install the APK, it will grant all runtime permissions upon app installed.

4. Make sure Android usb debugging is ON.


<https://developer.android.com/studio/debug/dev-options#enable>

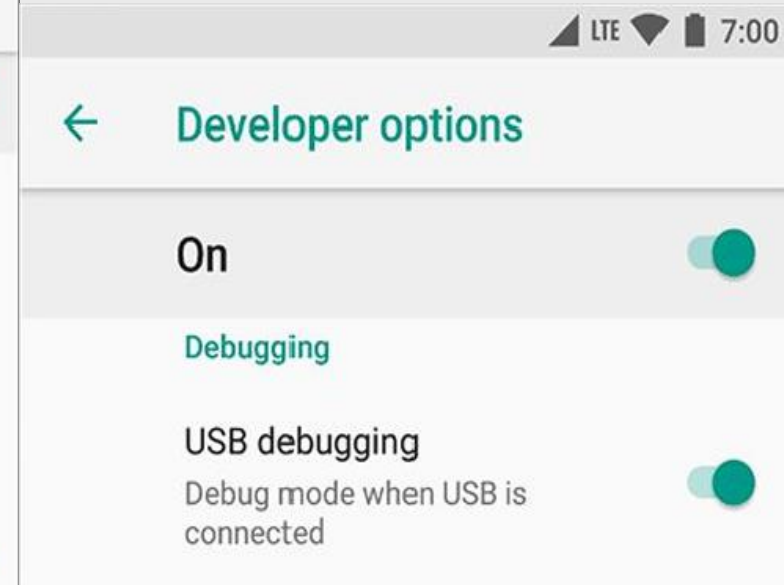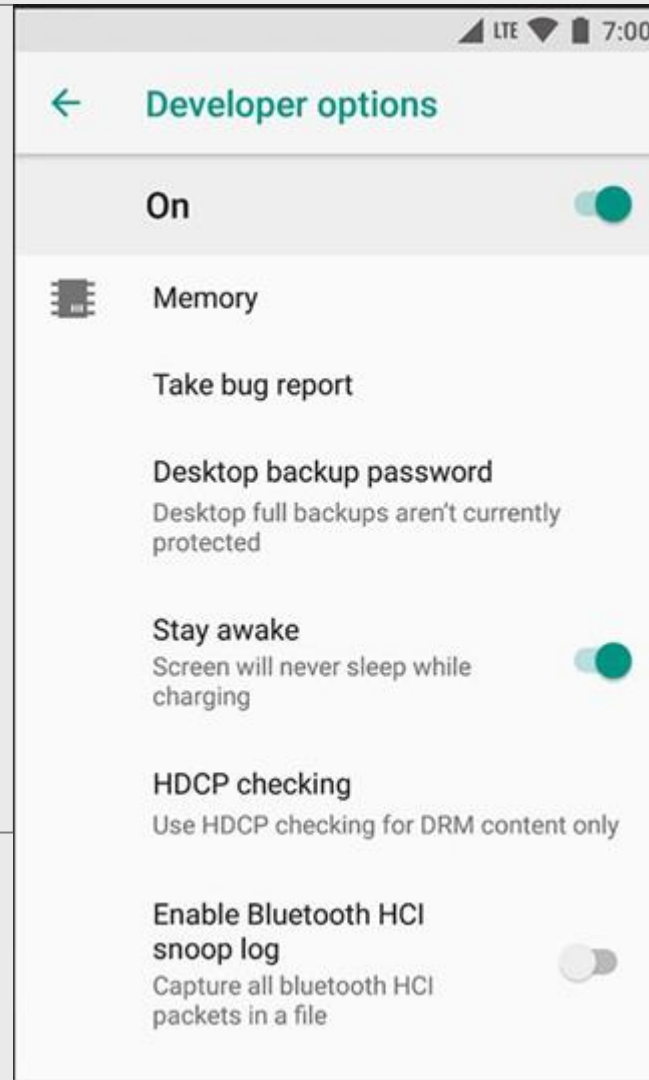

FIRST TIME POWER UP

1. For first time power up, please put platform on HB, to **active the battery**.
2. Power up the platform with tablet connected.
3. Launch Temi launcher in tablet after robot powered on.
4. After activation, you are able to start using the platform.

Don't forget to release the emergency button.

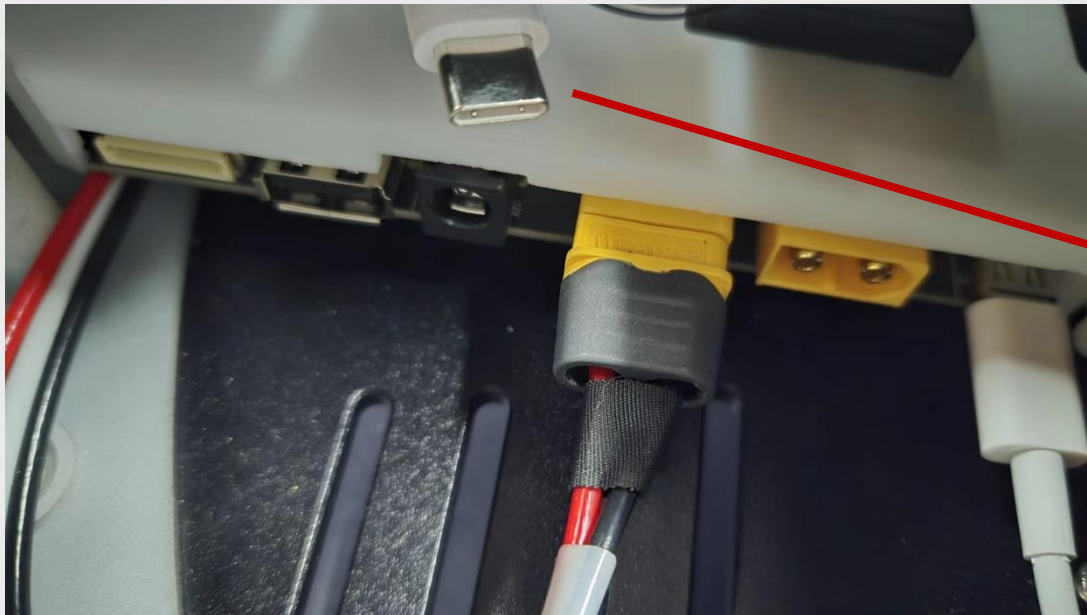

Use this Type C cable under the hatch to connect your tablet.




On/Off button is here!

1. Follow:

- A. On temi launcher, click or use wake word to trigger voice interaction, then use “follow me” command to start follow session.
- B. Goto “Map Editor”, then use the follow button to start follow.

2. Setup Homebase against wall, and clear 0.5m on both side, and 1.2m in front of it. Please do not put homebase on a soft surface or close to a mirror.

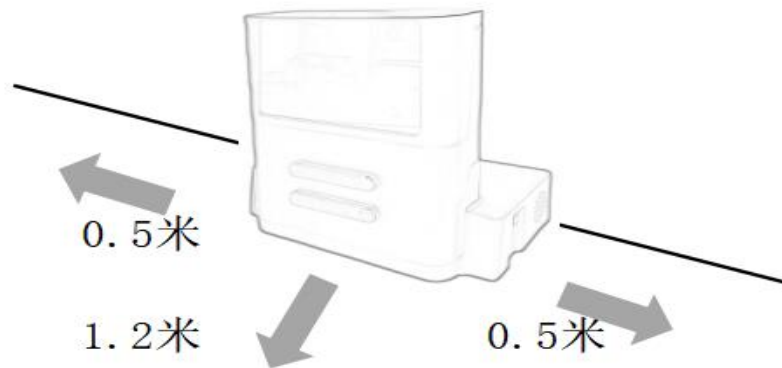


1. Tablet connection failed:


Make sure tablet is connected well, you should see a popup in Android notification bar.

2. Robot not moving:

Make sure Emergency button is released

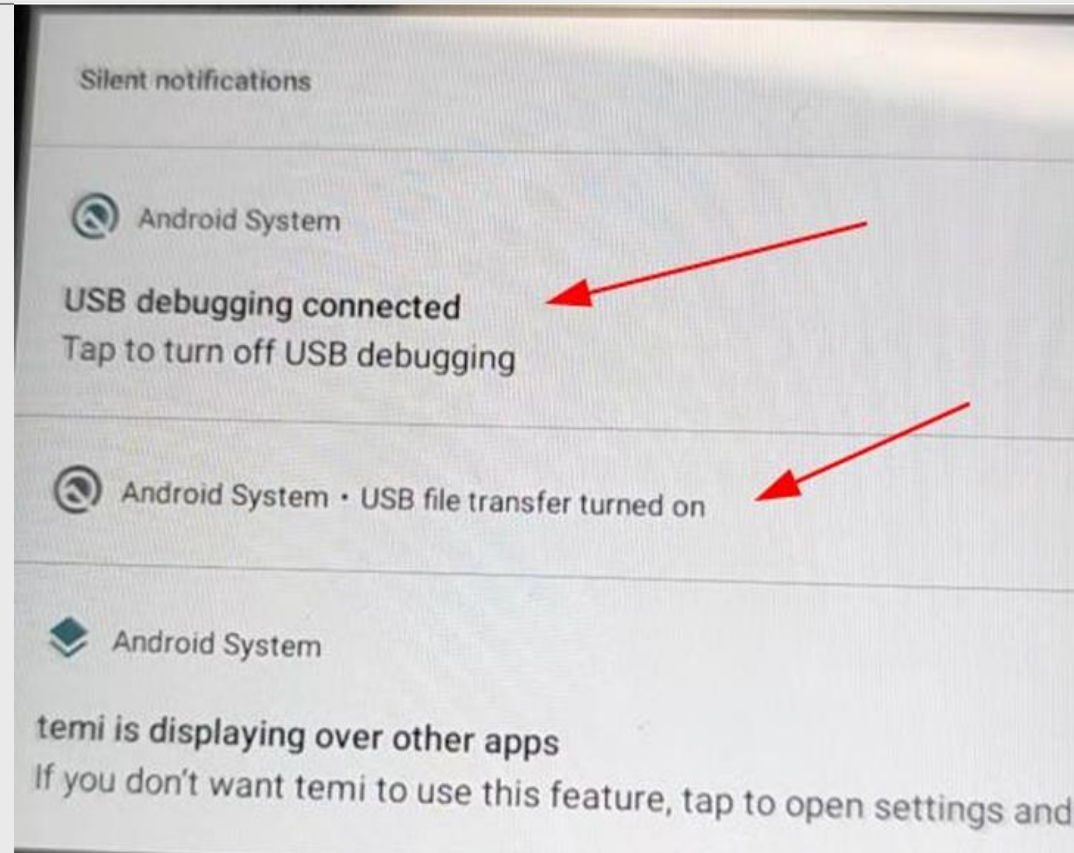

INSIDE HATCH

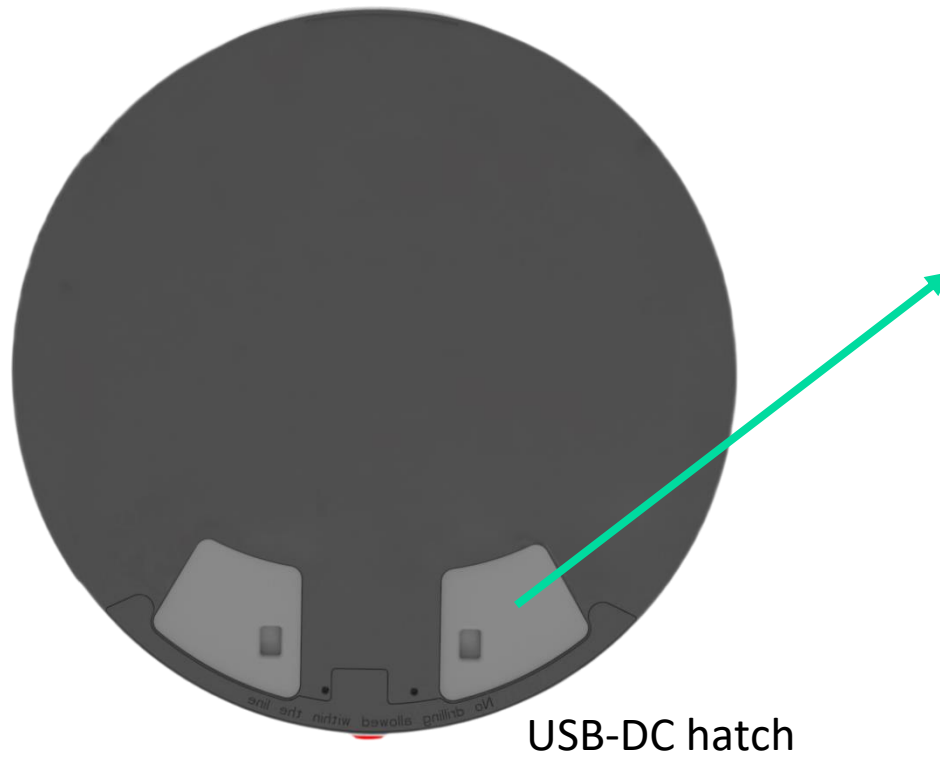

Platform provides :

- 1 USB 2.0 port
- 1 USB type C extention cable for tablet connection
- 1 12V/1.2A power Jack
- 1 23V/10A Power outlet


INSIDE HATCH

Type C cable for tablet connection

USB 2.0 connection port


23V/10A DC Power outlet

We provide a sample XT30 power cord for this outlet within our package.

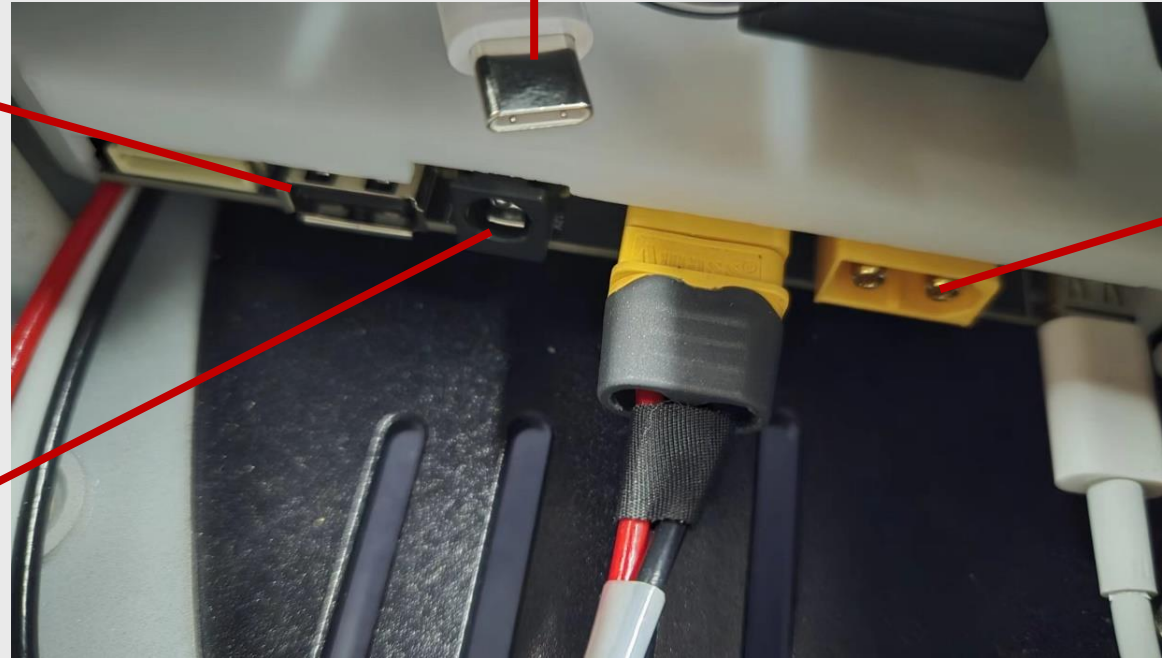


12V/1.2A DC power Jack

CONFIGURATIONS

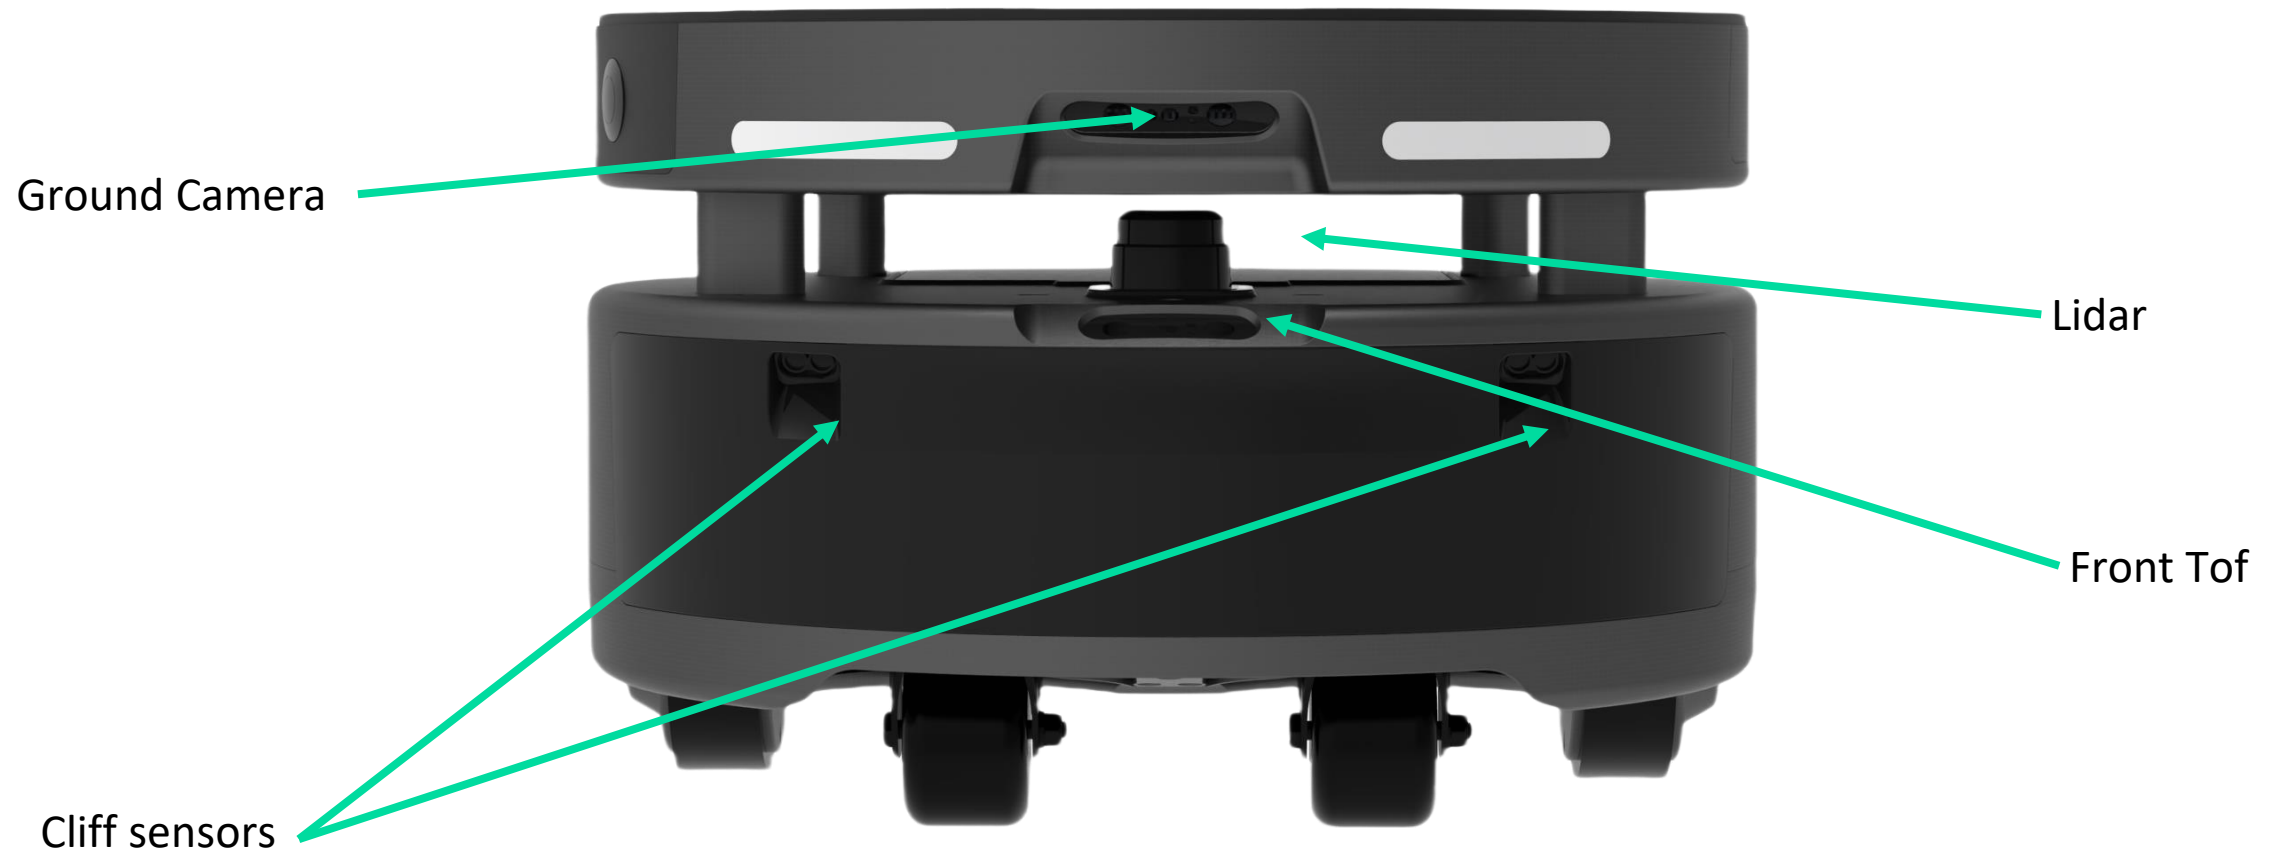

CONFIGURATIONS

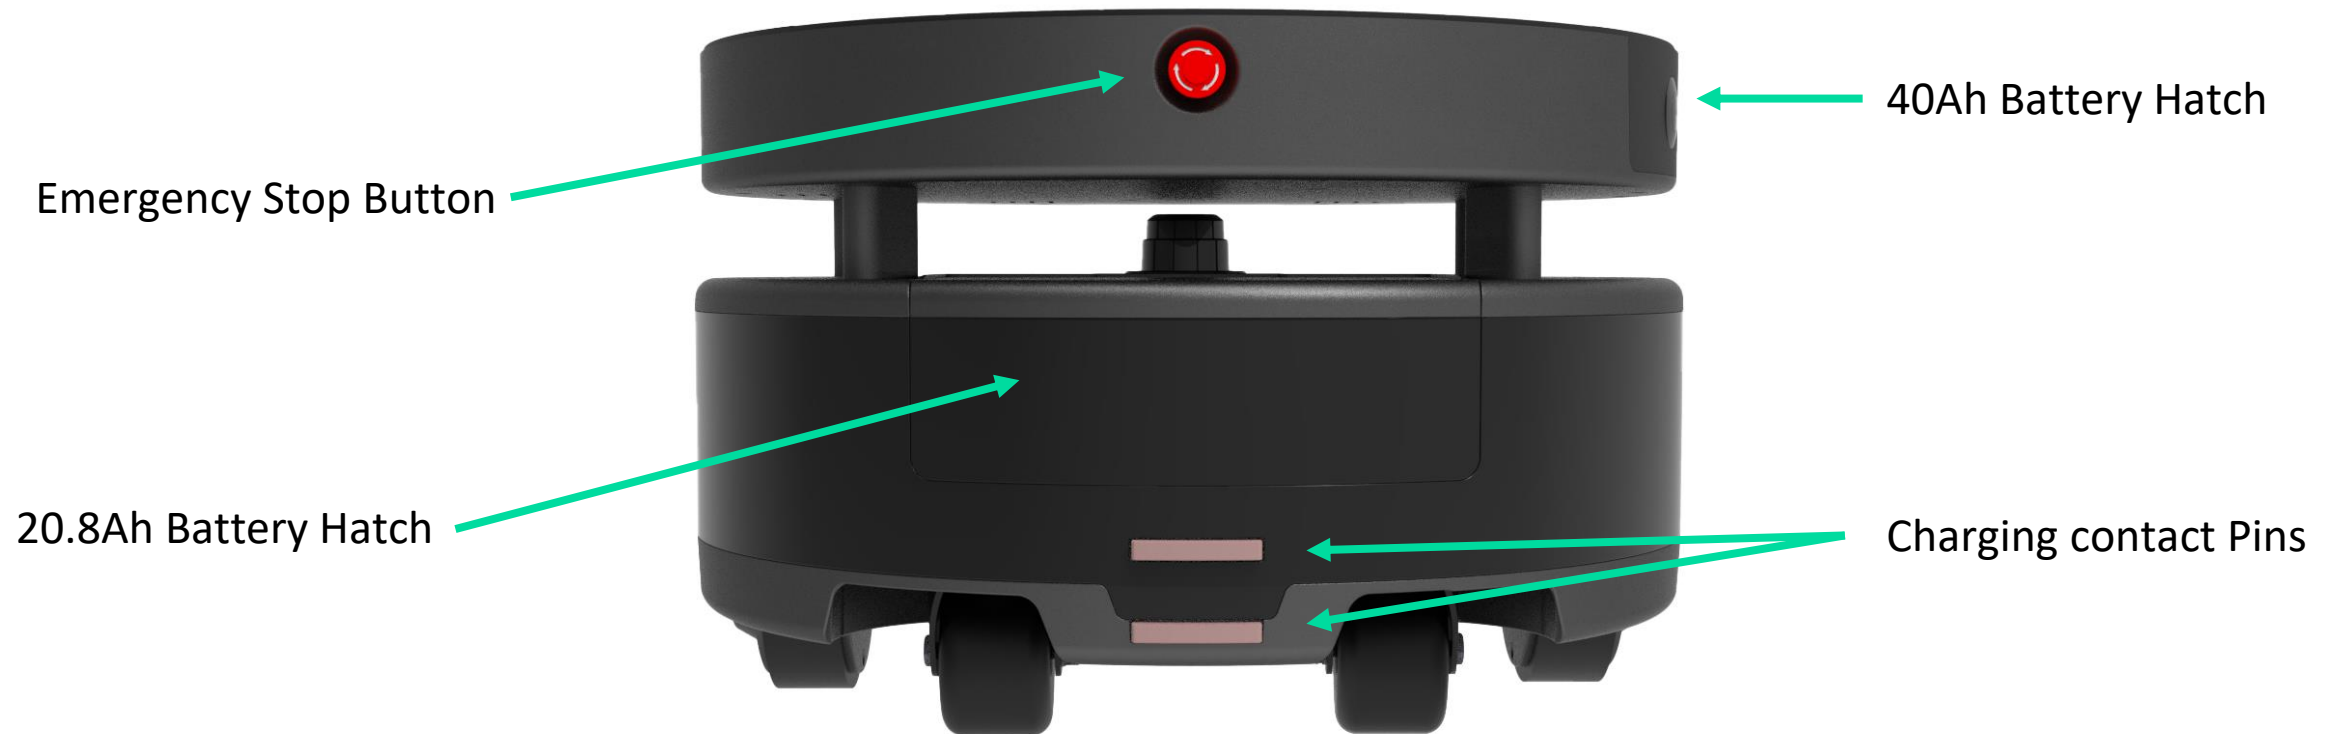

GENERAL PERFORMANCES

Category	Item	Value
Weight	Self weight	35 KG
	Maximum loading weight(with payload + self weight)	90 KG
Mechanical	System Outer Diameter	50 cm
	System Height	32 cm
	Lidar Height	23.8 cm
	HubWheel Diameter	15 cm
	Castor Wheel Diameter	7.5 cm
Mapping	Maximum map size	15000-20000 m ²
	Number of locations allowed	200 (recommended)/ ~1000(maximum)

GENERAL PERFORMANCES

Category	Item	Value
Floor conditions	Maximum step climbing	0.8 cm (vibration proof status)
	Maximum Floor angle	< 5°(vibration proof status)
	Maximum gap width	4 cm(static) / 6 cm (at 1m/s)
Movement	Max Linear speed	1 m/sec
	Spin Radius	0 cm
	Location accuracy	<10 cm (map depending)
Sensor parameters	Height obstacle detection range	12-150 cm from ground
	Ground obstacle detection range	2-120 cm from ground
	Minimum ground obstacle height	2 cm
	Minimum cliff detection height	-2 cm from ground
	Lidar detection range	0-40 m

GENERAL PERFORMANCE

Category	Item	Value
硬件接口+远程控制	Connection to Motherboard	USB, 5V 2A connection to ROBOX
	Power supply	12V 1.2A output(another 23V 10A DC output if add extra battery)
	SDK	Check official website
	Web Center	Temi Center
充电桩	Dimensions	280mm(H) * 330mm(W) * 200mm(L)
	Weight	3.6 KG
	Rated input	AC 100~240V 15A Max
	Rated output	DC 29.4V 20A

PLATFORM BATTERY PERFORMANCES/SPEC

Performances	Item	value
	Charging time 0-100% powered on	5h
	Charging time 0-100% powered off	4h
	Working time – normal usage	8h
	Working time – heavy usage	4-5h
	Standby time	18h
	Life cycle (25°)	>500 charging cycles*

SPEC	Item	value
	Cell type	Li-Ion
	Battery output Voltage	19-20.16V
	Standard charging Current	7A
	Fully charged voltage	29.4V
	Nominal Capacity	20.8Ah



*After 800 charging cycles maximum capacity will degraded to 70% and lower

PLATFORM EXTERNAL BATTERY PERFORMANCES / SPEC

Performances	Item	value
	Charging time 0-100% powered on	3.5 h
	Charging time 0-100% powered off	3 h
	Working time	5 h (Based on 5A discharge)
	Life cycle (25°)	>500 charging cycles*


SPEC	Item	value
	Cell type	Li-Ion
	Battery output Voltage	17.5-29.4V
	Fully charged voltage	29.4V
	Nominal Capacity	40Ah



*After 800 charging cycles maximum capacity will degraded to 70% and lower

ROBOT DEMENSIONS





Item	Weight[kg]
Robot WO battery	33
HB	3.6
Battery	3.25
Extra Battery	5

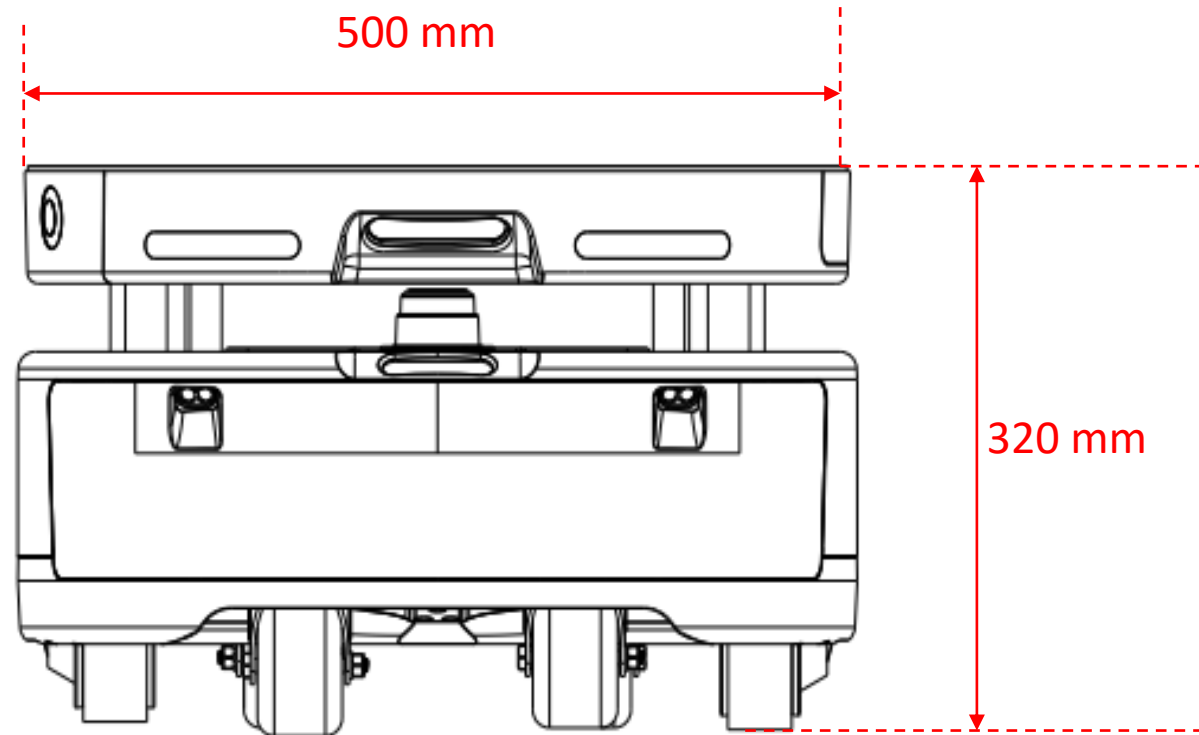



HOMEBASE – DIMENSION

Unit:mm

tēmi

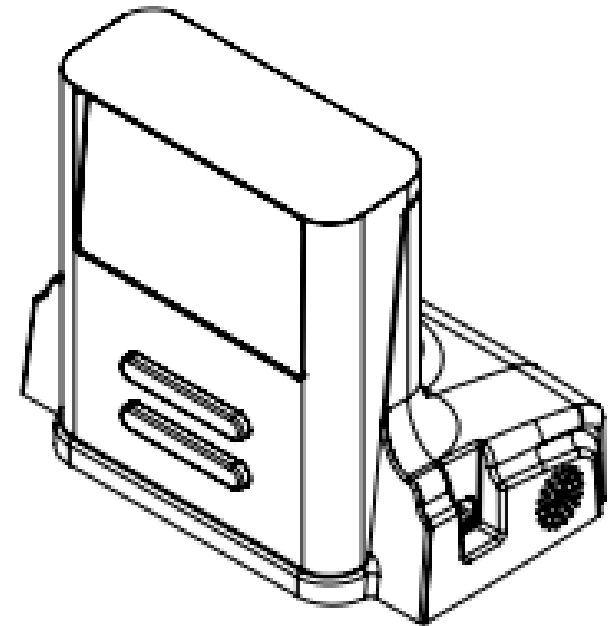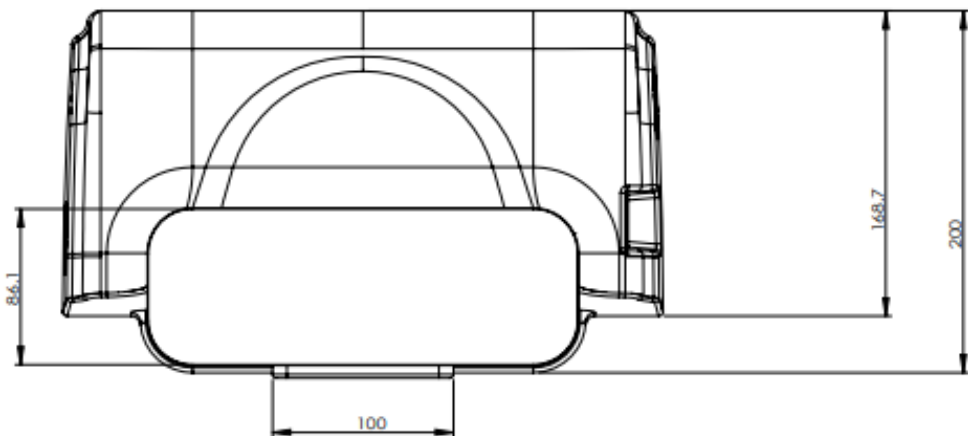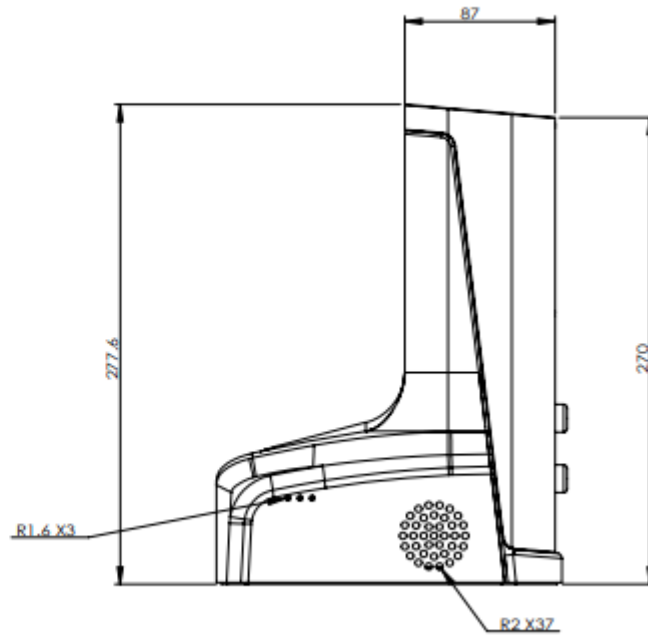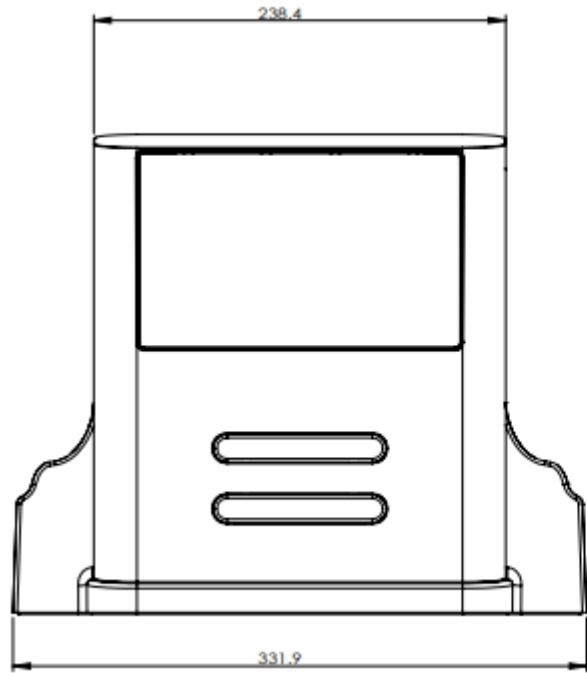

PACKAGE DEMENSIONS AND STRUCTURE

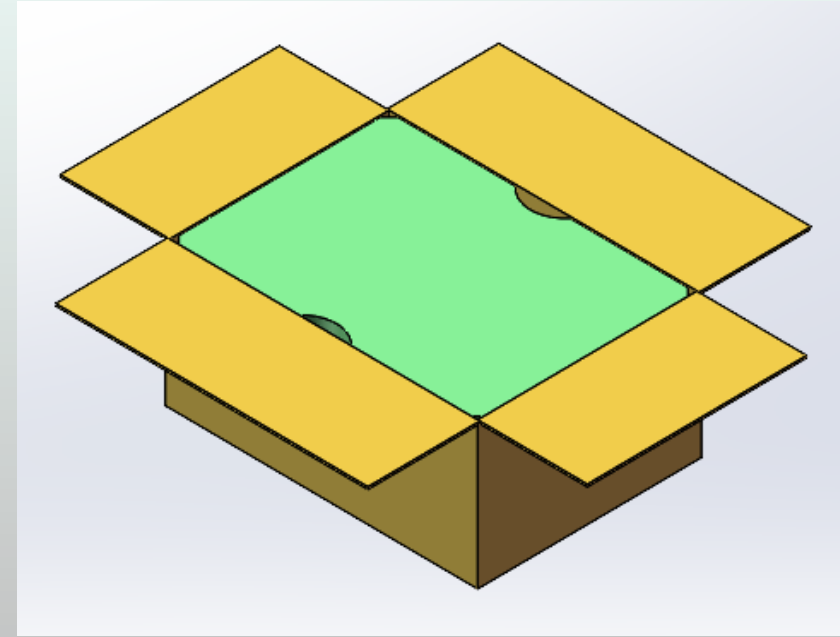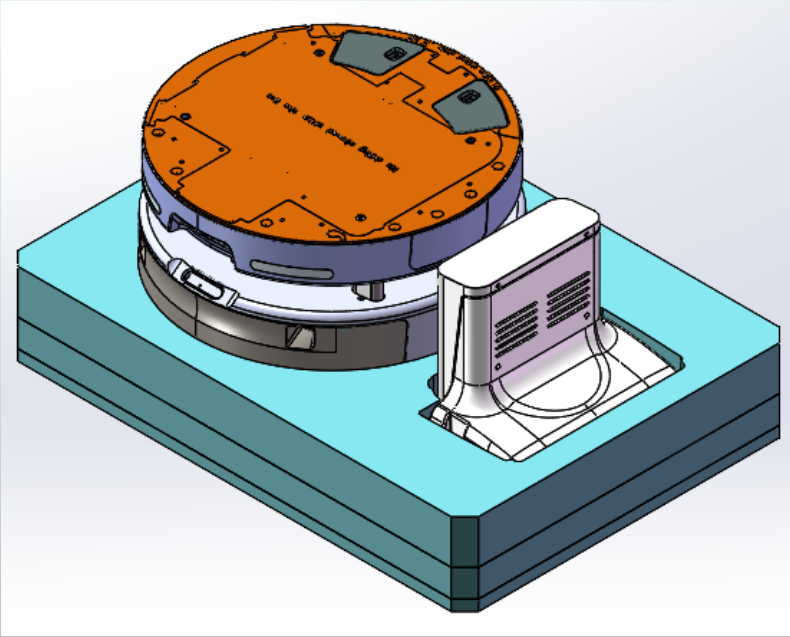

Item	Weight[Kg]
Empty package	5.75
Fully packed robot	44

Package Dimension:

860mm(L) * 610mm(W) * 400 (H)

STORAGE CONDITIONS

Item	Units	Value
Environment		Indoor conditions
Humidity range	%	15-65
Recommended Humidity	%	<60
Temperature range	°C	0-45
Recommended temperature	°C	25
Sunlight		Avoid direct sunlight

THANK YOU



联系我们